



SOFTAIRE UVC AIR PURIFYING/GERMICIDAL LAMP PART# SAUVC36W


DUCT OR PLENUM DEPTH MUST BE MIN 18"

CONTENTS:

- ① SOFTAIRE POWER (BALLAST) UNIT.
C/W 8' 120 VOLT, PLUG IN POWER CORD.
- ① PHILIPS TUV-PL-L 36W GERMICIDAL LAMP.
- ① FOAM MOUNTING GASKET.
- ④ #10 X 3/4" PHILLIPS #2 TAPPING SCREWS.
- ① MOUNTING TEMPLATE.

INSTALLATION INSTRUCTIONS:


- SELECT LOCATION OF LAMP.
- ATTACH TEMPLATE TO DESIRED LOCATION USING TAPE.
- USING A MARKER OR SCRIBER, MARK LOCATIONS OF SCREW HOLES AND 2 1/2" LAMP HOLE, IN CENTER OF CROSS HAIRS, ON MOUNTING TEMPLATE.

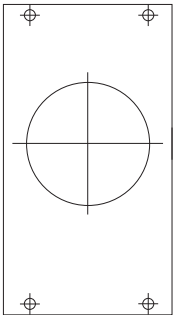

- DRILL ④ 1/8" HOLES FOR MOUNTING SCREWS.
- DRILL 2 1/2" HOLE FOR LAMP OR CUT OUT WITH TIN SNIPS.
- ATTACH FOAM GASKET TO BACK OF POWER UNIT.
- INSERT 4 PIN PHILIPS LAMP INTO SOCKET.
- USE PHILIPS SCREW DRIVER TO LOCK IN BULB IN SOCKET.
- INSERT LAMP INTO 2 1/2" HOLE ON DUCT.
- INSERT PHILIPS MOUNTING SCREWS ④ FIRMLY TIGHTEN.
- PLUG POWER CORD INTO RECEPTACLE, TURN POWER ON.

TOOLS REQUIRED:

- POWER DRILL
- #2 PHILLIPS SCREW DRIVER (OR POWER BITS)
- 2 1/2" DIA HOLE SAW OR USE TIN SNIPS
(1/2" BIT REQUIRED WHEN USING TIN SNIPS)
- MARKER OR SCRIBER
- 1/8" DRILL BIT

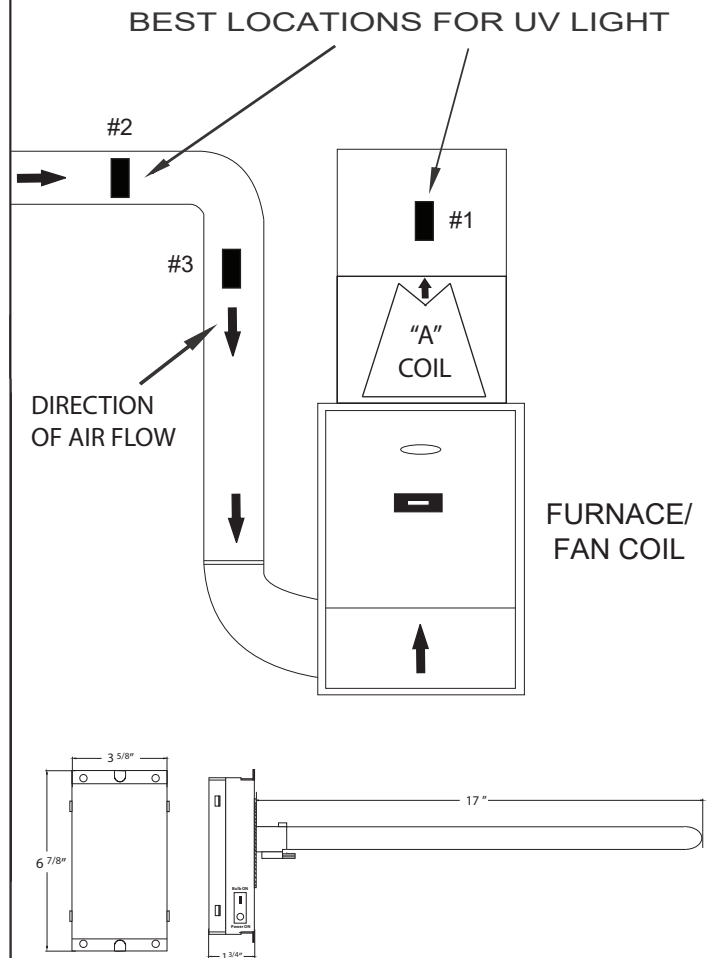

WARNING: HARMFUL TO SKIN & EYES. TURN OFF AND UNPLUG, TO INSPECT OR CHANGE BULB. NEVER EXPOSE SKIN OR EYES TO UVC LAMP.